


## Connecting the base unit and chargers


- 1 Choose a suitable site for the base unit.**  
Make sure it is not near to another telephone, nor to other electrical equipment

- 2 Plug the mains power lead and the telephone line cord into the back of the base unit**

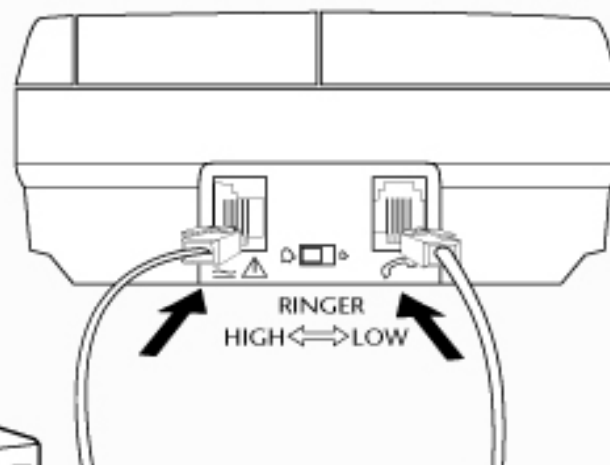

NOTE: you can set the base unit ringer volume using the switch located between the two cable connectors

- 3 Plug the mains adapter into a 230 V AC, 50 Hz mains socket, with the switch on the socket set to OFF**

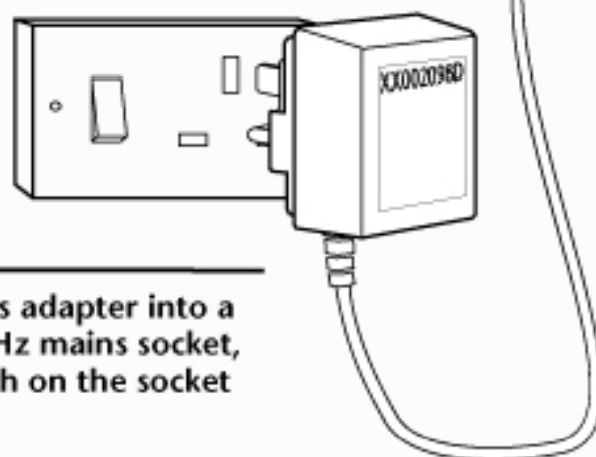

The Pegasys 8 Triple base unit must be used with mains adapter, part no. XX002098D, supplied with the unit. Using any other adapter will result in non-compliance with EN41003, and will invalidate any approval given to this apparatus.

- 4 Switch on mains power at the socket**